



CHIPINO Proto-Shield Assembly Instructions

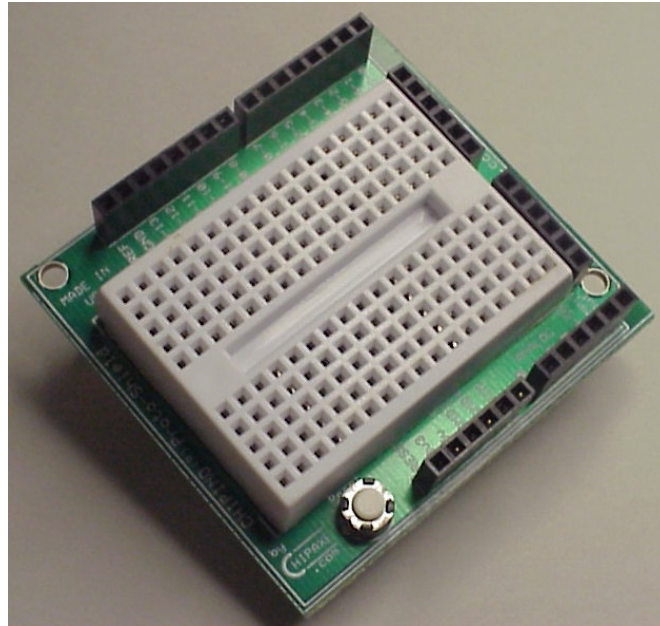

Parts List

- 1 – Momentary Switch
- 2 – 6 pin SIP header
- 2 – 8 pin SIP header
- 1 – CHIPINO Proto-Shield Circuit Board
- 1 – Mini ProtoBoard

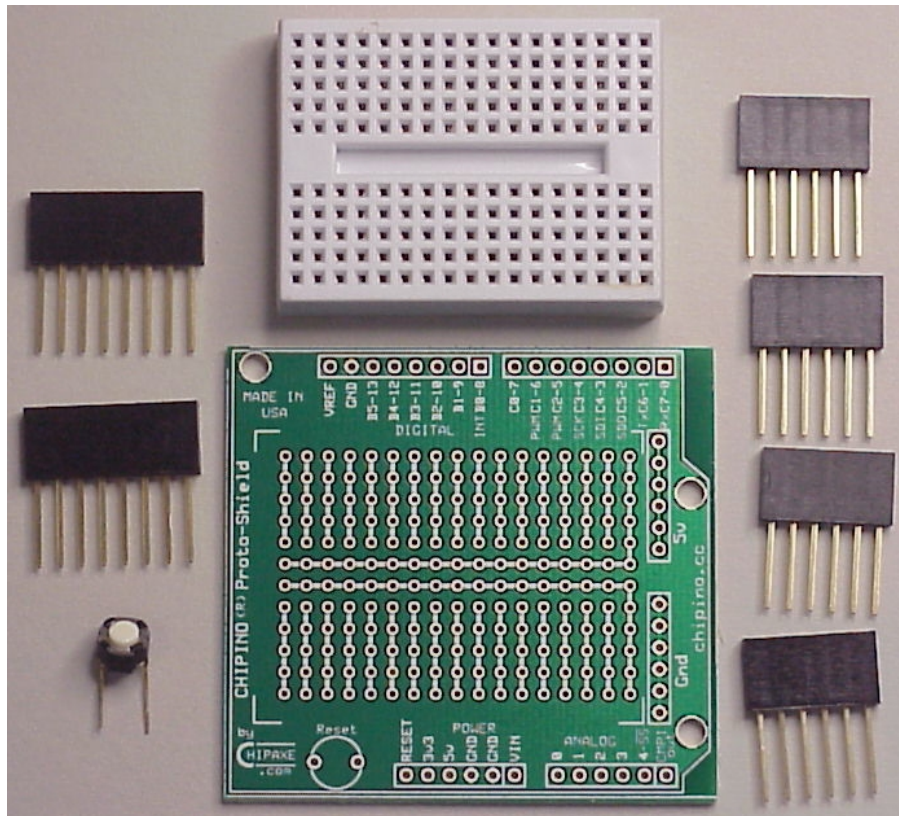

1. Insert momentary switch into the Reset switch location and solder in place. It can insert in either direction. Clip off the excess leads.
2. Insert the 6 pin headers at the Power rail and the Analog rail. Solder in place. Make sure they align straight. **DO NOT** clip off the excess leads. These excess leads are used to plug the Proto-Shield into the CHIPINO.
3. Insert the 8 pin headers at the Digital rails. Solder in place. Make sure they align straight. **DO NOT** clip off the excess leads. These excess leads are used to plug the Proto-Shield into the CHIPINO.
4. Insert the 6 pin headers at the 5v rail and the Gnd rail. Solder in place. Make sure they align straight. Clip off the excess leads.
5. Peel back cover from sticky back bottom side of the ProtoBoard and carefully place the protoboard between the corner markers. Press down to secure the board in place.